



Cut here to remove. Do Not Tear!

COPPER SPUR UL SETUP INSTRUCTIONS

1. Remove contents from stuff sack. Spread the tent body out flat on the ground.
2. Assemble the two poles: One main pole with two hubs and one short straight crossover pole. To ensure each pole section is fully seated insert each pole section into the next by hand, instead of allowing the shock cord to snap them together.
3. Position the assembled pole set on top of the tent body. CS1 & CS2: Align the orange pole segments of the main pole set with the orange webbing at the foot of the tent. CS3 & CS4: The pole set is symmetrical so the pole tips may be inserted at either end.
4. Insert the pole tips into the grommets at the four corners of the tent.
5. Attach the H Clip on the top-center of the tent body to the Swivel CH hub on the main pole. CS1: Attach H Clip to Swivel H.
6. Attach the Twist Clips on the tent body to the main pole.
7. Place the crossover pole across the top of the ridge pole and into the top of the Swivel CH for CS2, CS3, & CS4. The cross pole on the CS1 is already attached to the main pole.
8. CS1, CS2, CS3: Clip the ends of the crossover pole into the clear plastic Ball Cap clips that are located above the doors on the tent body. CS4: Attach the H Clips above the doors of the tent body to the S Stoppers on the cross pole.
9. Stake out the four corners of the tent body.
10. Drape the rainfly over the tent body. CS & CS2: Align the silver and orange webbing straps on the rainfly with those on the corners of the tent body. CS3 & CS4: Align the doors on the fly with the doors on the tent body.
11. CS4: Insert the tips of the cross pole into the webbing pockets located on the underside of the fly. Note: CS1, CS2 and CS3: The webbing pockets are used in the Fast Fly set up only.
12. Make sure the webbing at the corners of the rainfly is completely slackened. Attach the buckles on the rainfly to those on the tent body.
13. Stake out the vestibules.
14. Evenly tension the webbing on each corner as needed to keep the rainfly taut.
15. Stake out all guylines.

Separate 6", large diameter pole segment included for emergency field repair. Slide repair pole over the break to act as a splint.

FAST FLY SET UP INSTRUCTIONS

If you purchase the optional Big Agnes footprint for any of our models, it will enable you to pitch a Fast Fly shelter while leaving the tent body behind. The Fast Fly configuration requires the footprint, tent fly, poles and stakes.

1. Lay the footprint on the ground and stake out.
2. Assemble the two poles: One main pole with two hubs and one short straight crossover pole. To ensure each pole section is fully seated insert each pole section into the next by hand, instead of allowing the shock cord to snap them together.
3. Position the assembled pole set on top of the footprint. CS1 & CS2: Align the orange pole segments of the main pole set with the orange webbing on the footprint. CS3 & CS4: The main pole has equal length pole sections so the pole tips may be inserted at either end.
4. Insert the pole tips into the grommets at the four corners of the footprint.
5. Place the crossover pole across the top of the ridge pole and into the top of the Swivel CH for CS2, CS3, & CS4. The cross pole on the CS1 is already attached to the main pole.
6. Drape the rainfly over the pole frame aligning the silver webbing on fly with the silver webbing on the footprint. Insert the tips of the cross pole into the webbing pockets located on the underside of the fly.
7. Make sure the webbing at the corners of the rainfly is completely slackened. Attach the buckles on the rainfly to those on the footprint.
8. Stake out the vestibules.
9. Evenly tension the webbing on each corner as needed to keep the rainfly taut.
10. Stake out all guylines.


DAC Hardware:




Ball Cap




Swivel CH

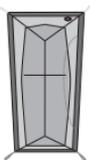


Copper Spur UL1
Tent Body

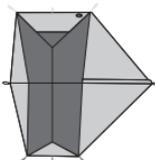

Copper Spur UL1
Tent Fly

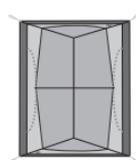

Copper Spur UL3
Tent Body

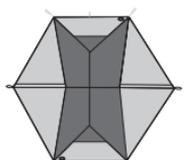

Copper Spur UL3
Tent Fly




H Clip




Twist Clip



Copper Spur UL2
Tent Body

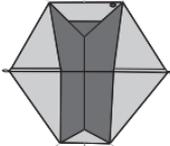

Copper Spur UL2
Tent Fly

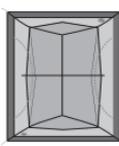

Copper Spur UL4
Tent Body



Copper Spur UL4
Tent Fly



Swivel H



S Stopper



Copper Spur UL1



Copper Spur UL2



Copper Spur UL3



Copper Spur UL4

Thanks for choosing a Big Agnes tent!

Please feel free to contact us if you have any questions or comments.
tech@bigagnes.com

HELPFUL HINTS FOR TENT SET UP

- Our tents are easy to set up but we suggest you practice once at home before using them for the first time to avoid late night bickering with tent mates while fumbling around in the dark.
- Before pitching tent, clear campsite of debris that may pierce tent floor.
- Big Agnes tents are all freestanding, but we recommend staking them out to increase space and keep your tent from becoming a tumbleweed.
- Hang onto your stuff sacks or they'll blow away and create backcountry litter.
- Pull on the pole sleeve fabric when inserting poles to avoid any bunching in the material.
- Push rather than pull poles through pole sleeves.

TENT CARE

Storage

Always make sure your tent is dry and free of debris before storing. Stuff or fold your tent a different way each time to avoid permanent creases. Store in a cool, dry place. Never leave your tent in hot temperatures (such as a car trunk or attic space), as it will damage the material coatings. Storing your tent damp can result in mildew growth, which may cause your tent to smell, leak or delaminate. Mildew damage is not covered under warranty.

Cleaning

For light cleaning, you can sponge the tent with warm water. If it's necessary to wash the entire tent, always use cleaners recommended specifically for tents. We recommend McNett Mirazyme cleaner, or Nikwax Tech Wash. Do not dry clean or machine-wash your tent. Detergents and dry cleaning solvents will damage the fabric and ruin waterproofing. Never use hot water, bleach, liquid detergents or dishwashing liquids.

Seam Sealing

Seam tape alone is durable enough to prevent water leakage. Any seams that have been taped do not need to be seam sealed with a liquid sealer unless you want extra protection. Make sure the seam-sealer is completely dry before re-packing your tent. Damage caused by misapplication may void warranty.

Zippers

Keeping your zippers clean will help keep the coils and sliders from wearing out. If filled with dirt, vacuum or brush zippers before storing tent. Try to avoid liquid lubricants because they attract dirt.

Repairs and Warranty

All Big Agnes tents are guaranteed against manufacturing or material defect. We do not warranty products damaged from normal wear and tear, alteration made by owner, misuse, accidents or damages caused by uses other than intended. Damage due to misuse, normal wear and tear, or improper care may be repaired, at the discretion of Big Agnes, at a reasonable charge. Tents returned for repair must be clean and free of debris.



For more information on Tent Care or our Warranty and Return policy, see www.bigagnes.com or call 970-367-4400.

P.O. Box 773072 • Steamboat Springs, Colorado • 80477
Toll Free: 877.554.8975 • www.bigagnes.com



----- Cut here to remove. Do Not Tear! -----